



# TUNDRA

2 0 1 1

QUICK REFERENCE  
GUIDE



TOYOTA

# 2011 Tundra

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tundra.

## ! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tundra operations. Every Tundra owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

# INDEX

## OVERVIEW

Engine maintenance	8
Fuel tank door release and cap	7
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
<b>Keyless entry<sup>1</sup></b>	<b>6</b>
Light control-Instrument panel	6

## FEATURES/OPERATIONS

Accessory meter	25
Air Conditioning/Heating	20-21
Audio	22-23
Automatic Transmission	9
Bottle holders	26
Cruise control	25
Cup holders	27
Door locks	10
Four-wheel drive	10
Garage door opener (HomeLink <sup>®</sup> ) <sup>3</sup>	21
<b>Lights<sup>1</sup> &amp; turn signals</b>	<b>16</b>
Mirrors-Power side view	10
Moonroof	12
<b>Multi-information display<sup>2</sup></b>	<b>18</b>
Parking brake	18
Power outlets-12V DC	17
Power outlets-115V AC	17
Rear seat entertainment system	24
Seat adjustments-Front	12-13
Seat adjustments-Rear	13
Seat heaters and ventilators	19
Seats-Folding	14-15
Seats-Head restraints	14
Telephone controls (Bluetooth <sup>®</sup> )	26
Tilt and telescopic steering wheel	11
"TOW/HAUL" switch	11
VSC OFF button	24
Window-Rear	19
Windows-Power	19
Windshield wipers & washers	15

## SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	29
Seat belts	28
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Tire Pressure Monitoring (warning) System	28

<sup>1</sup> Visit your Toyota dealer for information on customizing this feature.

 
 
 
 
<sup>2</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.

<sup>3</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.


# OVERVIEW

## Instrument panel

### Steering wheel controls (if equipped)

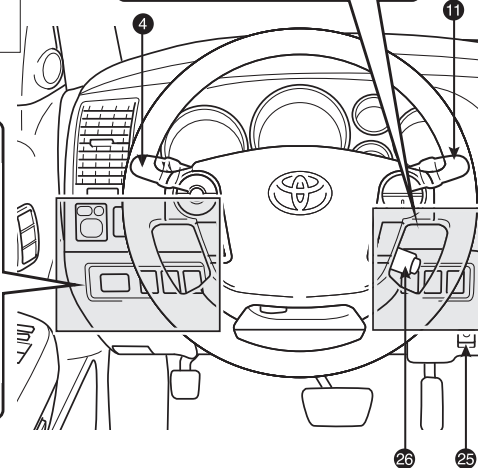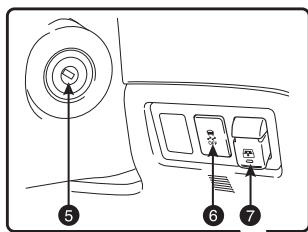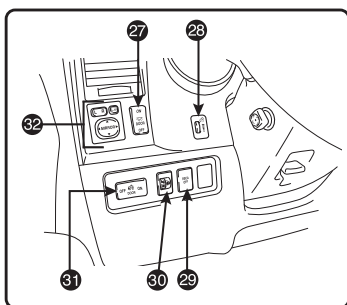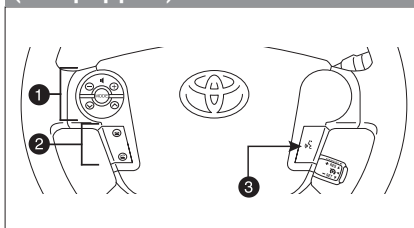

- 1 Steering wheel audio controls<sup>1</sup>
- 2 Telephone controls<sup>1</sup>
- 3 Voice command button<sup>1,2</sup>
- 4 Headlight, turn signal and front fog light<sup>1</sup> controls
- 5 Ignition switch
- 6 VSC OFF button
- 7 Power back window switch<sup>1</sup>
- 8 Emergency flasher button
- 9 Multi-information display/Accessory meter control buttons<sup>1</sup>
- 10 Intuitive parking assist button<sup>1</sup>
- 11 Wiper and washer controls
- 12 Accessory meter
- 13 Theft deterrent/Engine immobilizer system indicator<sup>1</sup>
- 14 Audio system or navigation system-integrated audio system<sup>2</sup>
- 15 Outside rearview mirror/Back window defogger/Windshield wiper deicer button<sup>1</sup>
- 16 Front passenger seat belt reminder
- 17 Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator<sup>1</sup>
- 18 Seat heater controls<sup>1</sup>

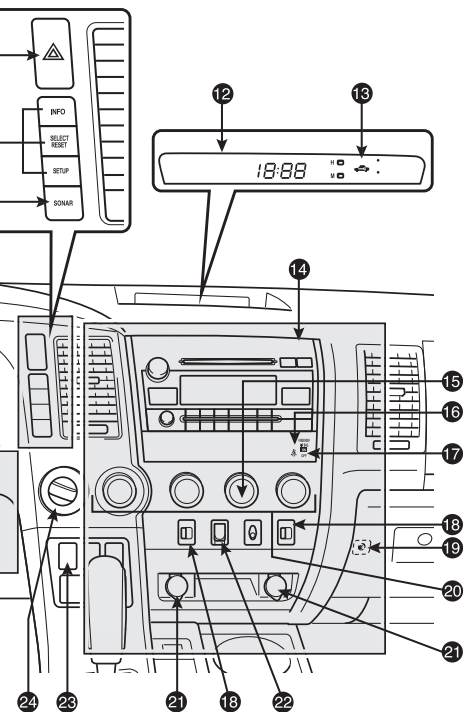 


- 19 Front passenger airbag manual ON/OFF switch<sup>1</sup> (in glove box)
- 20 Air Conditioning controls
- 21 12V DC Power outlet
- 22 AUX port/USB port<sup>1</sup>
- 23 "TOW/HAUL" button<sup>1</sup>
- 24 Two-wheel/Four-wheel drive selector<sup>1</sup>
- 25 Tire Pressure Monitoring (warning) System reset
- 26 Cruise control<sup>1</sup>
- 27 Interior light/Personal light main switch
- 28 Instrument panel light control
- 29 "RSCA OFF" switch<sup>1</sup>
- 30 Headlight leveling dial<sup>1</sup>
- 31 Cargo lamp switch
- 32 Power rearview mirror controls<sup>1</sup>


<sup>1</sup> If equipped

<sup>2</sup> For vehicles with a navigation system, refer to the "Navigation System Owner's Manual."

### Bench seat with manual Air Conditioning System

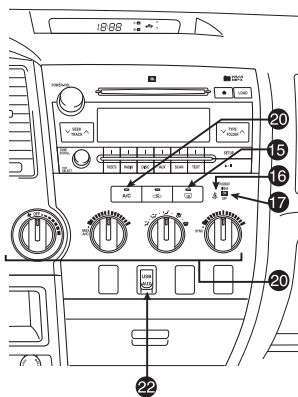 


### Separate seat with manual Air Conditioning system

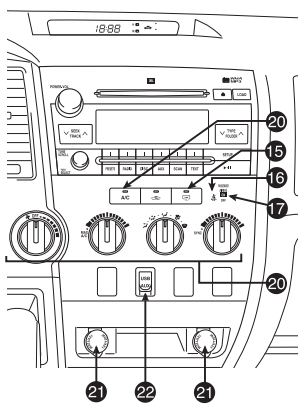 


## Instrument cluster

 Without multi-information display

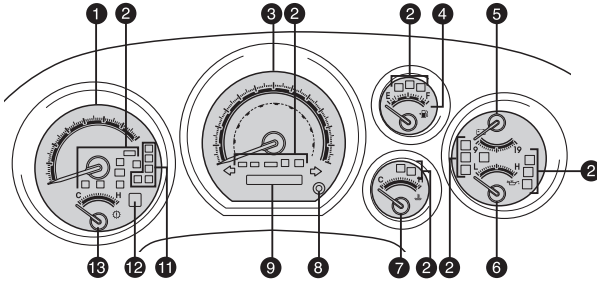

With multi-information display

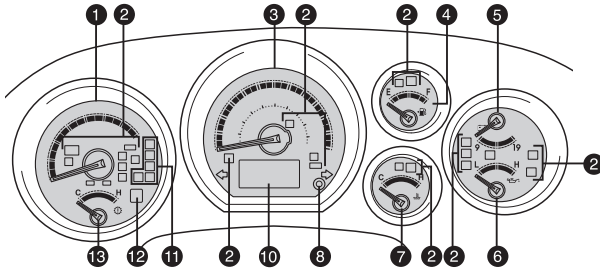 

- ❶ Tachometer (if equipped)
- ❷ Service indicator and reminder
- ❸ Speedometer
- ❹ Fuel gauge
- ❺ Voltmeter (if equipped)
- ❻ Oil pressure gauge (if equipped)
- ❼ Engine coolant temperature
- ❽ Trip meter reset knob
- ❾ Odometer and two trip meters
- ❿ Multi-information display
- ⓫ Automatic Transmission shift position indicator
- ⓬ Automatic Transmission shift range display
- ⓭ Automatic Transmission fluid temperature gauge (if equipped)

## Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2011 Owner’s Manual.

























**BRAKE** Brake system warning<sup>1</sup>



Driver/Front passenger seat belt reminder  
(alarm will sound if speed is over 12 mph)



 
Charging system warning<sup>1</sup>

	Front passenger occupant classification or front passenger airbag ON/OFF indicator
	Low engine oil pressure warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Engine oil replacement reminder <sup>1</sup>
	Low fuel level warning
	Open door warning
	Airbag SRS warning <sup>1</sup>
	Master warning
	Automatic Transmission fluid temperature warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>
	Low windshield washer fluid level warning <sup>1</sup>
	Theft deterrent/Engine immobilizer system indicator
	Roll Sensing Curtain Airbags OFF indicator <sup>1</sup>
	Headlight low/high beam indicator
	Turn signal indicator
	High/Low speed four-wheel drive indicator
	Slip indicator <sup>1</sup>
	Vehicle Stability Control OFF indicator <sup>1</sup>
	TOW/HAUL mode indicator <sup>1</sup>
	AUTO Limited Slip Differential indicator <sup>1</sup>
	Cruise control indicator
	Anti-lock Brake System warning <sup>1</sup>
	Power steering warning light <sup>1</sup>
	Traction Control OFF indicator


<sup>1</sup> If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

## Keyless entry

### Locking operation

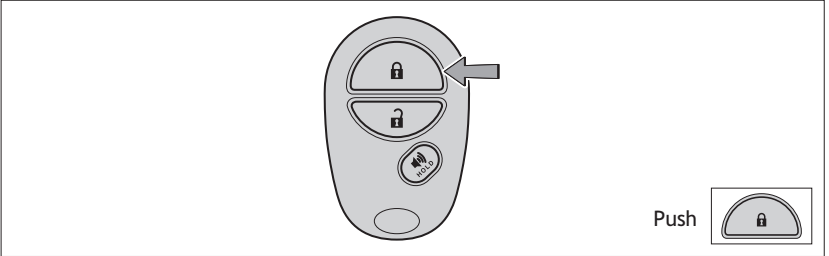


### Unlocking operation

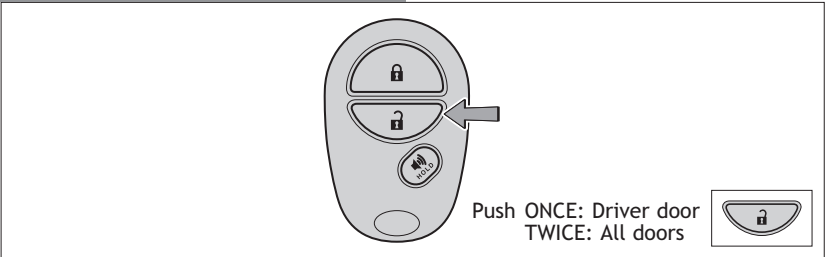 


**NOTE:** If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

### Panic button

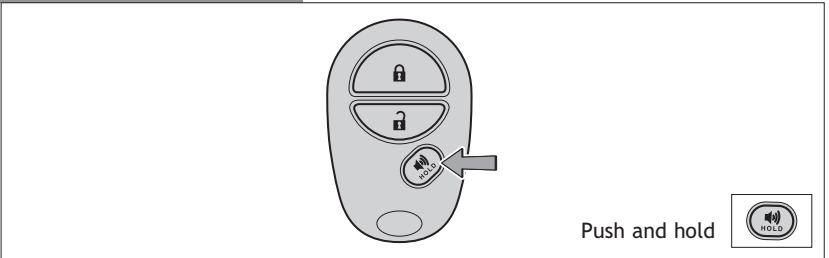 


## Light control-Instrument panel

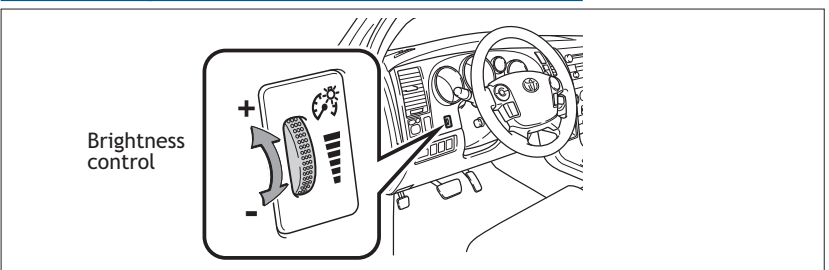 




## Fuel tank door release and cap

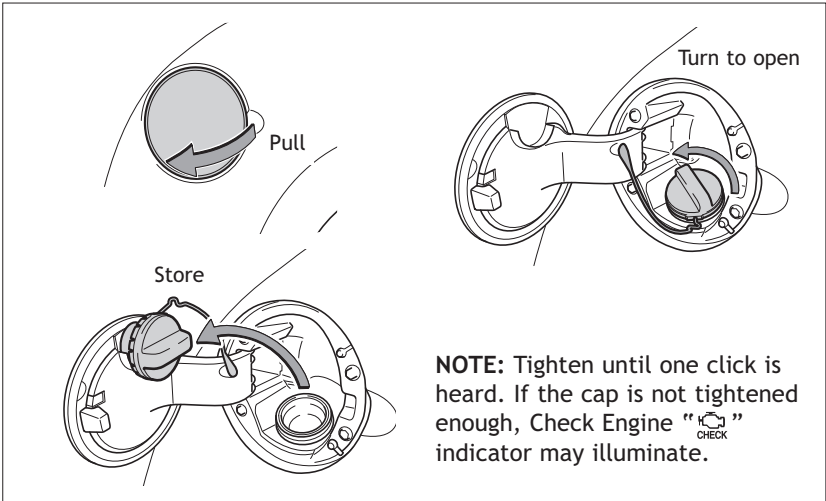 


## Hood release

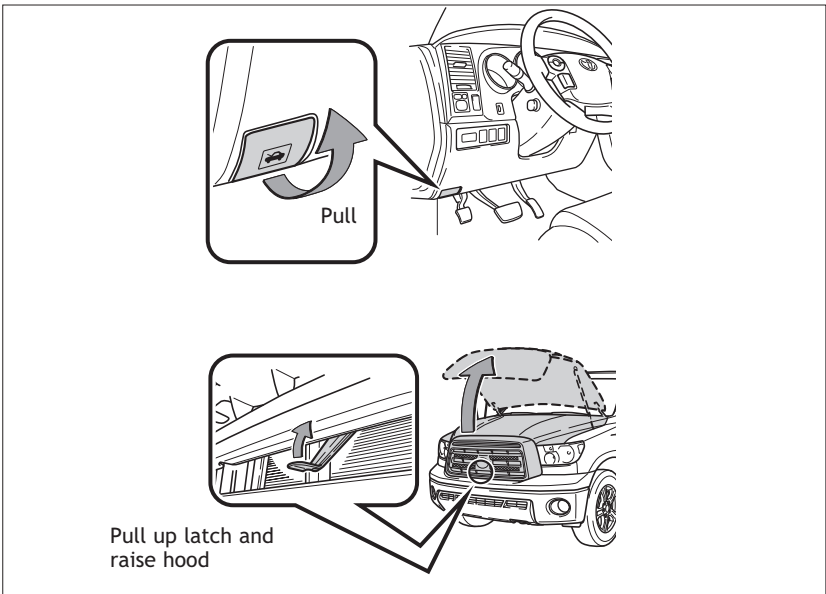 


## Engine maintenance
 
### 4.0L 6 cylinder (1GR-FE) engine

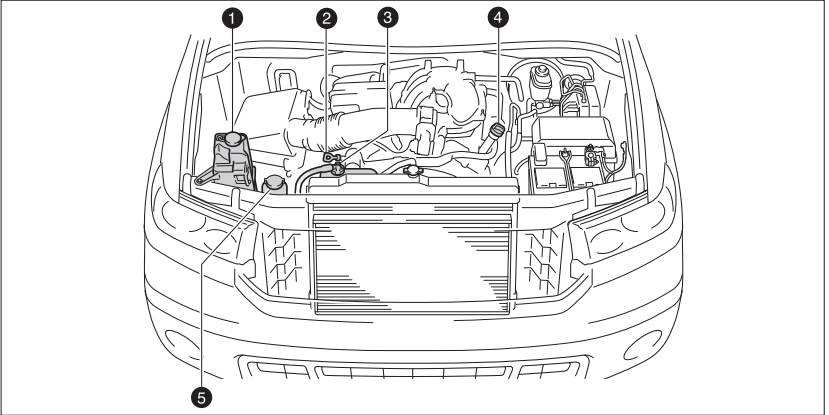

### 4.6L 8 cylinder (1UR-FE) and 5.7L 8 cylinder (3UR-FE/3UR-FBE) engines

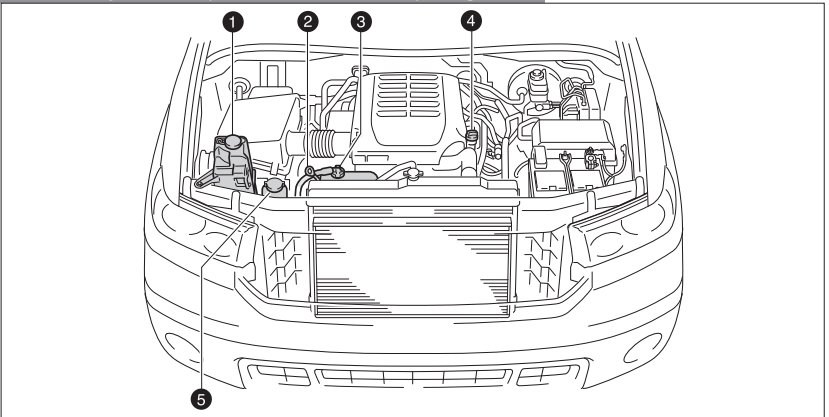 


- ① Windshield washer fluid tank
- ② Engine oil level dipstick
- ③ Engine coolant reservoir
- ④ Engine oil filler cap
- ⑤ Power steering fluid reservoir

**NOTE:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."


# FEATURES/OPERATIONS
 
## Automatic Transmission

### Floor shift type

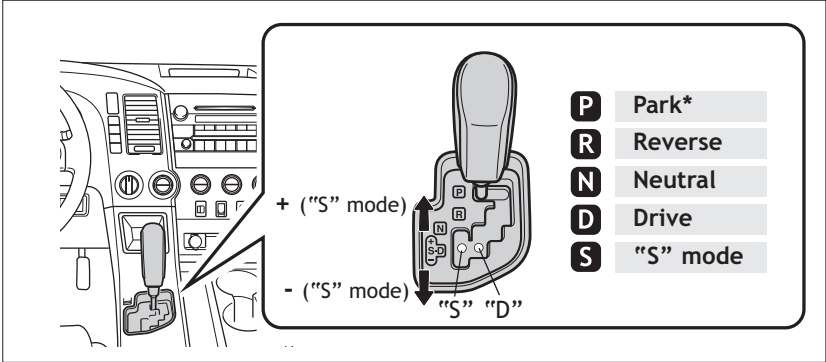

### Column shift type

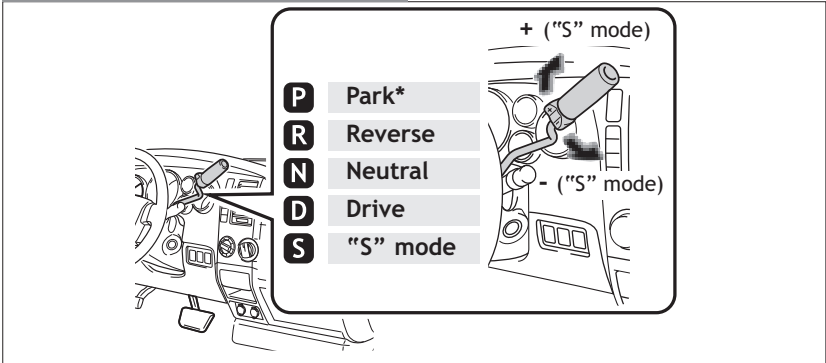 

\* The engine switch must be set at "ON" and the brake pedal depressed to shift from Park.

### "S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

#### Floor shift type:

 
- + : Upshift (push and release)
- : Downshift (pull and release)

#### Column shift type:

- + : Upshift (push and release)
- : Downshift (push and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

### Four-wheel drive (if equipped)

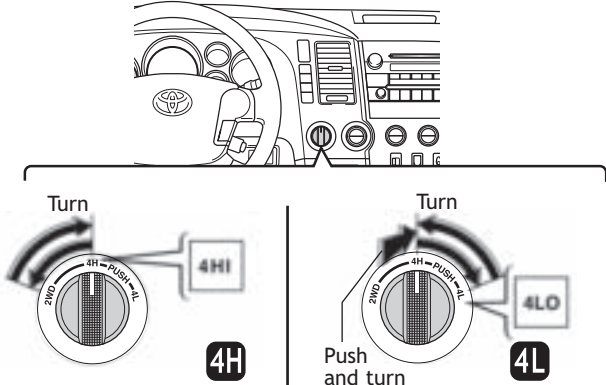

Turn

Turn

4HI

4L


Push and turn

- 2WD** High speed (2WD)
- 4H** High speed (4WD)  
Turn to "4H" with speed below 62 mph.
- 4L** Low speed (4WD)  
Shift to "N" position when stopped, then push and turn to "4L."

For best fuel economy and performance under normal driving conditions, keep in "2WD" position.

### Mirrors-Power side view (if equipped)

 
Select left or right

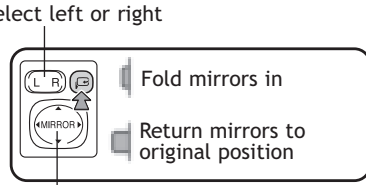

Fold mirrors in


Return mirrors to original position

 Adjust

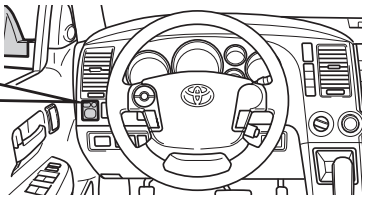

Key must be in the "ACC" or "ON" position.

### Door locks (if equipped)

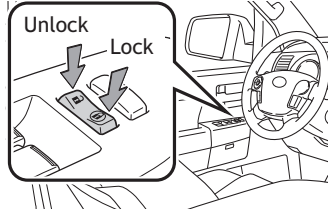 


Unlock

Lock


# Tilt and telescopic (if equipped) steering wheel
 
## Manual

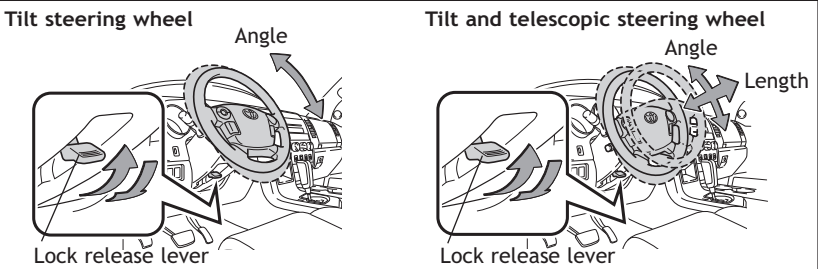

Hold wheel, push lever down, set angle and length, and return lever.


## Power

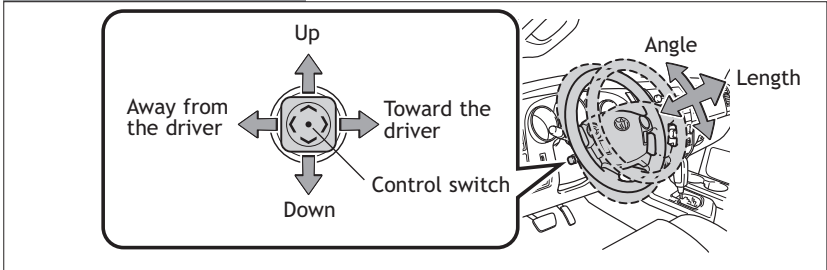 

Push the control switch, set angle and length.

**NOTE:** Do not attempt to adjust while the vehicle is in motion.

# “TOW/HAUL” switch (if equipped)

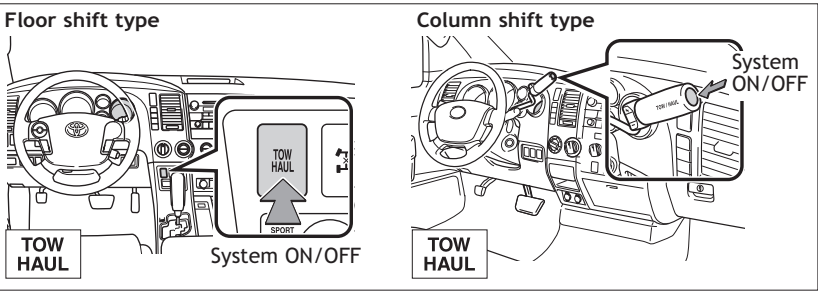 


“TOW/HAUL” mode can be used when carrying heavy loads. As fuel economy is reduced while in “TOW/HAUL” mode, deactivating when driving without a load is recommended.


Refer to the *Owner’s Manual* for more details on this system before attempting to use it.

## Moonroof (if equipped)
 
### Sliding operation

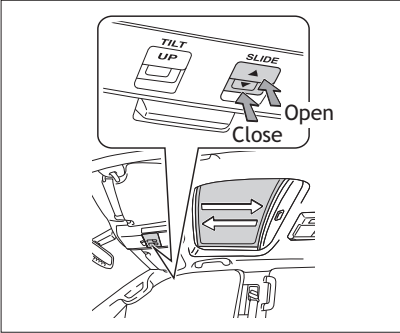

### Tilting operation

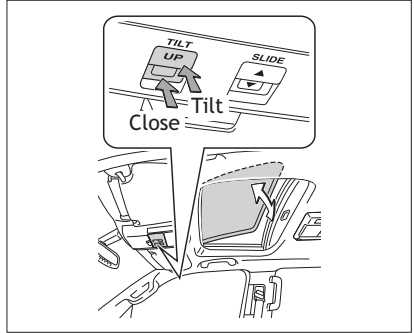 


Push once to open/close completely. To stop partway, press the switch lightly.


## Seat adjustments-Front
 
### Manual seat


Separate seat  
-Regular cab model

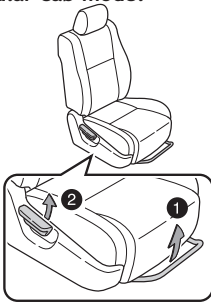

 Separate seat  
-Double cab and CrewMax models

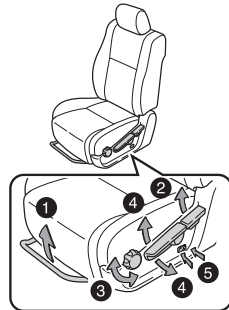


Bench seat

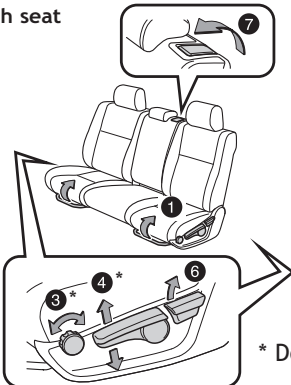 

\* Double cab and CrewMax models only

## Power seat

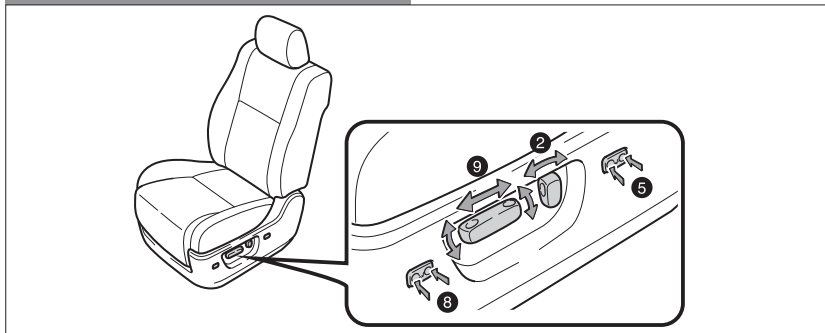 

- ❶ Seat position (forward/backward)
- ❷ Seatback angle
- ❸ Seat cushion angle
- ❹ Seat height
- ❺ Lumbar support (if equipped)
- ❻ Seatback angle (side)
- ❼ Seatback angle (center)
- ❽ Leg support (if equipped)
- ❾ Seat position, cushion angle and height


## Seat adjustments-Rear (CrewMax models)



 
- ❶ Seat position (forward/backward)
- ❷ Seatback angle and fold

## Seats-Head restraints


Front-Separate seat

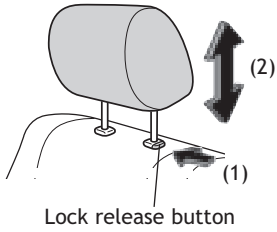


Front-Bench seat

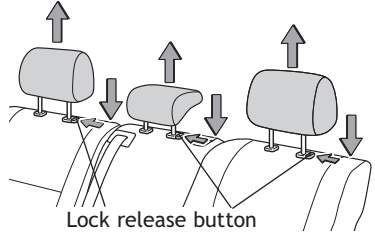 

Rear (CrewMax model)


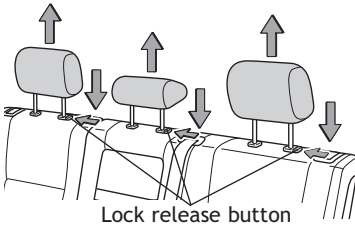 


Rear (double cab model)

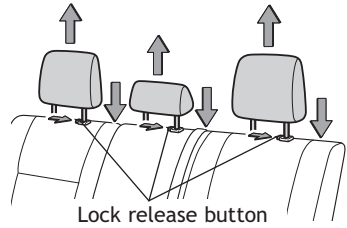 


## Seats-Folding

  Front (regular cab model)

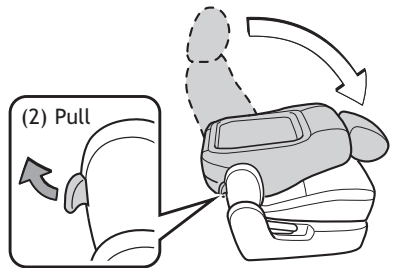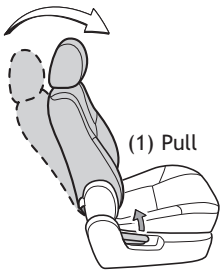




### Rear (double cab model)

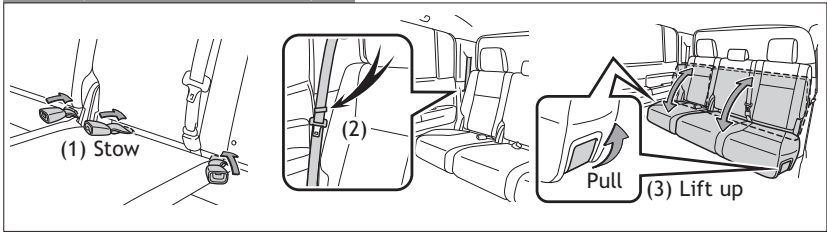 


### Rear (CrewMax model)

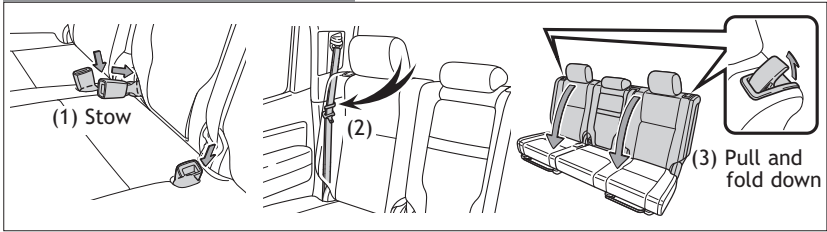 


## Windshield wipers & washers
 
### With intermittent wiper

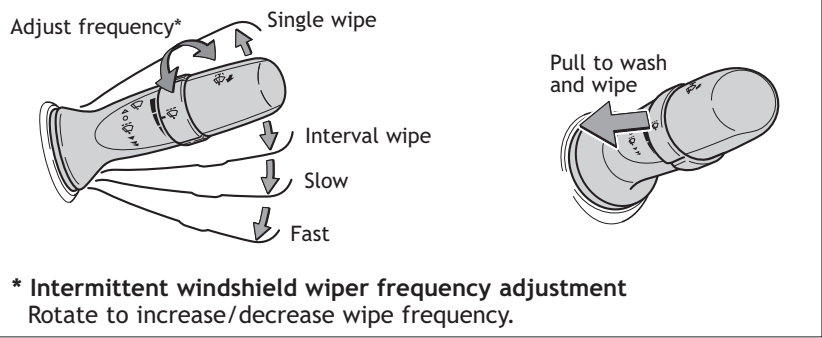


### Without intermittent wiper

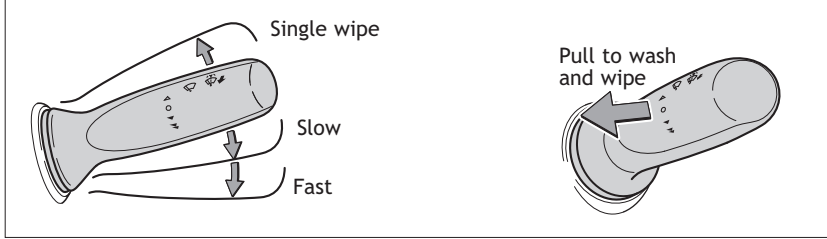 


## Lights & turn signals
 
### Headlights

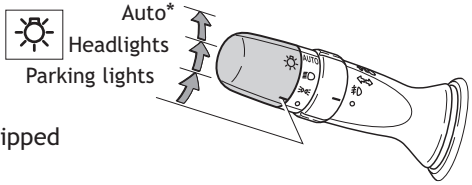


\* If equipped

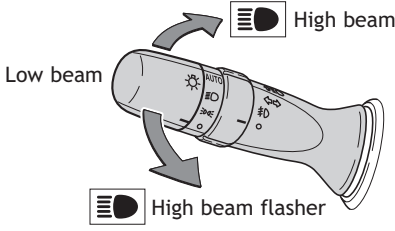 


- Daytime Running Light system (DRL) Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.
- Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.

### Front fog lights (if equipped)

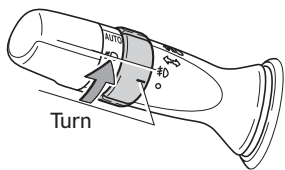 

Front fog lights come on only when the headlights are on low beam.


### Turn signals

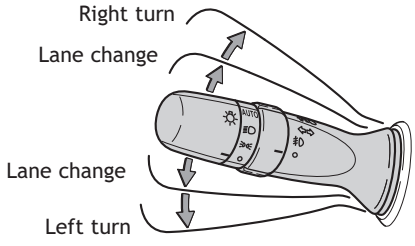 


## Power outlets-12V DC (if equipped)

### Separate seats

 
Instrument panel

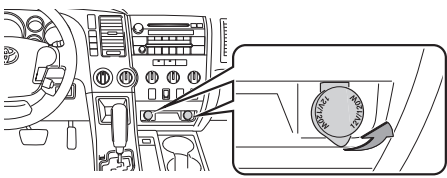


Inside of the center console box

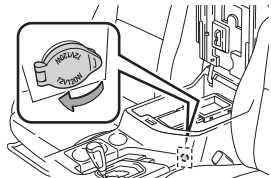 

Back of the center console box

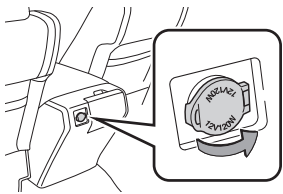 


 Back of the center console box (CrewMax model)

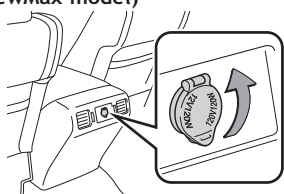


### Bench seat

 
Instrument panel

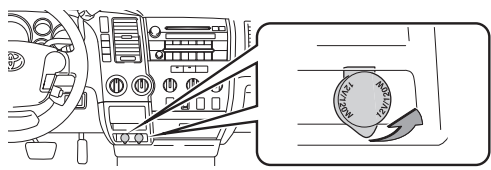

Back of the front center seat

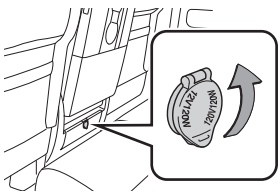 

 
Back of the front center seat (CrewMax model)

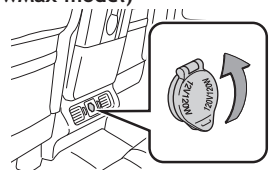


Key must be in the "ACC" or "ON" position to be used.

## Power outlets-115V AC (if equipped)

 
Back of the center console box

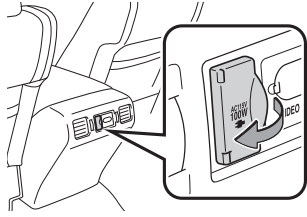

Back of the front center seat

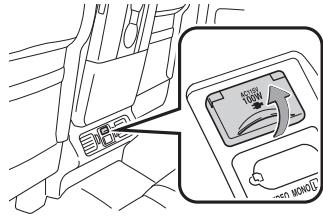 

## Multi-information display (if equipped)

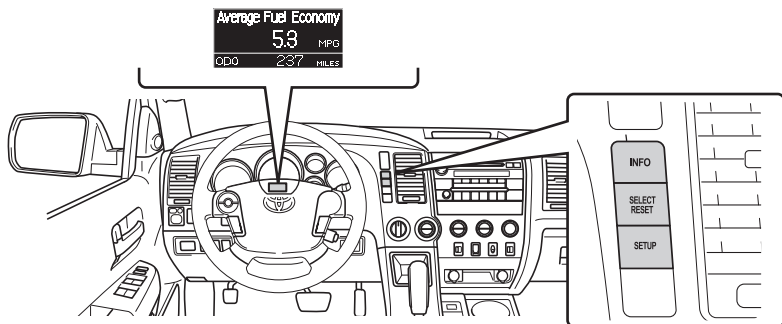 


**Push "INFO" to change information in the following:**

- (1) Zoom display of odometer and trip meter
- (2) Average gas mileage
- (3) Current gas mileage
- (4) Miles left on remaining fuel
- (5) Running time from engine start
- (6) Average vehicle speed

**Push "SETUP" to customize to the following settings:**

- (1) UNIT
- (2) KEYLESS ENTRY FEEDBACK
- (3) KEYLESS ENTRY RELOCK TIMER
- (4) KEYLESS ENTRY ALL DOORS UNLOCK
- (5) DOOR AUTO LOCKING
- (6) DOOR AUTO UNLOCKING
- (7) HEADLAMPS AUTO OFF TIMER
- (8) COURTESY LAMPS OFF TIMER
- (9) LANGUAGE
- (10) DEFAULT SETTING

 
## Parking brake

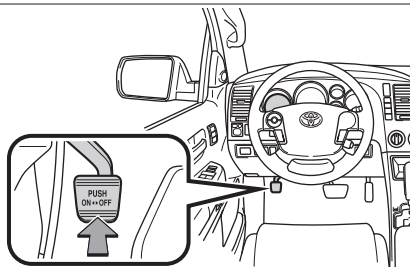

**BRAKE**

Set: Depress  
Release: Depress again
 
## Windows-Power (if equipped)

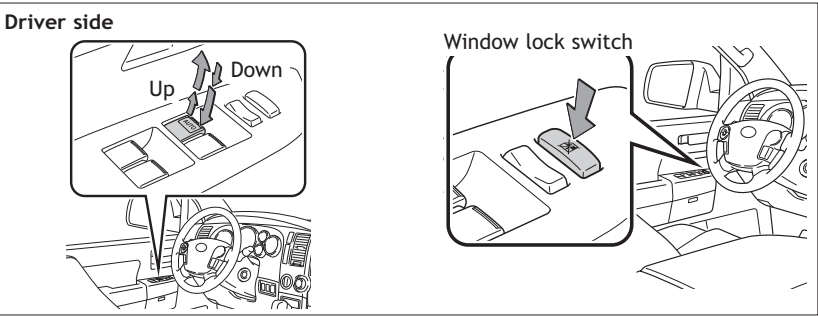


**Automatic operation (driver side only)** Push the switch completely down or pull it completely up and release to fully open or close.\* To stop window midway, lightly push the switch in the opposite direction.


**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.

\* Not all models equipped with one-touch close function.

## Window-Rear (if equipped)

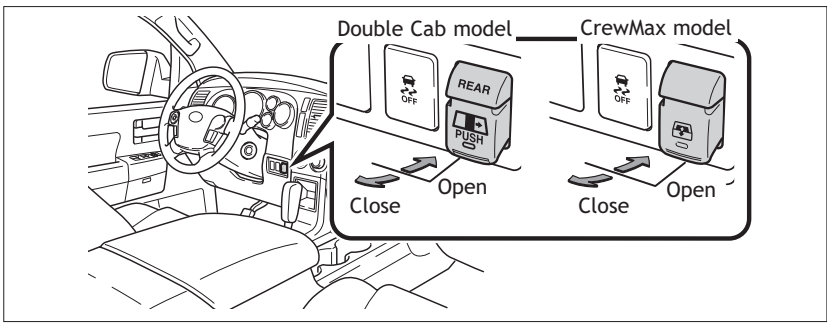 


## Seat heaters and ventilators (if equipped)

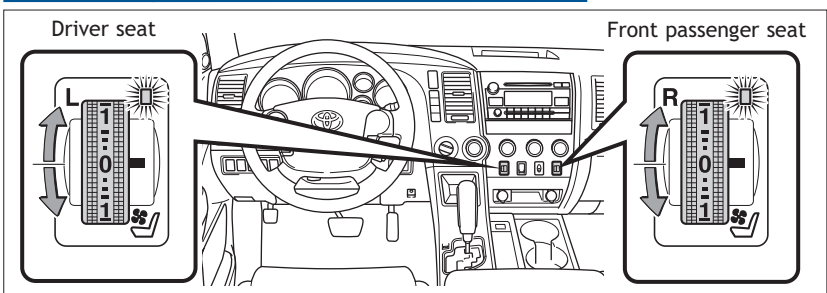 


## Air Conditioning/Heating
 
### Automatic Air Conditioning

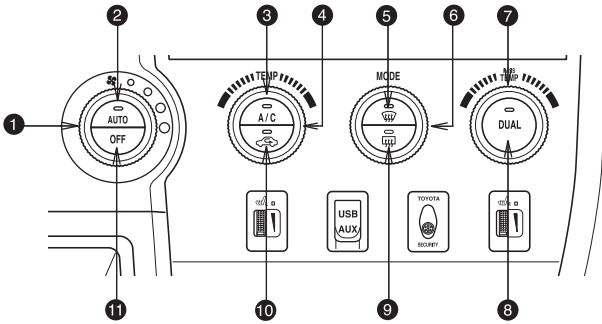


- ❶ Fan speed
- ❷ Automatic climate control ON  
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ❸ Air Conditioning ON/OFF
- ❹ Temperature selector (driver side)
- ❺ Windshield defogger (fresh air only)
- ❻ Airflow vent  
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.
- ❼ Temperature selector (front passenger side)
- ❽ “DUAL” button  
**Indicator ON:** Separate temperature settings for driver and passenger.  
**Indicator OFF:** Synchronize temperature settings for driver and passenger.
- ❾ Outside rearview mirror/Back window defogger
- ❿ Recirculate cabin air (fresh air when OFF)
- ⓫ Climate control OFF

## Manual Air Conditioning

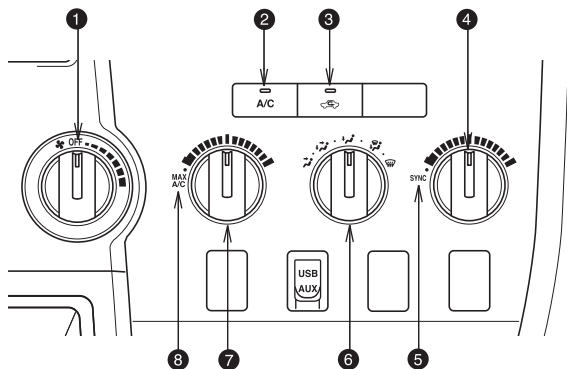 

- 1 Fan speed
- 2 Air Conditioning ON/OFF
- 3 Recirculate cabin air (fresh air when OFF)
- 4 Temperature selector (front passenger side)
- 5 Synchronize with driver side temperature setting
- 6 Airflow vent selector  
In "☀️" or "❄️" mode, use fresh air ("👉" indicator "OFF") to reduce window fogging.
- 7 Temperature selector (driver side)
- 8 Select for maximum cooling. Air intake will automatically be set to recirculate.

## Garage door opener (HomeLink®)\* (if equipped)

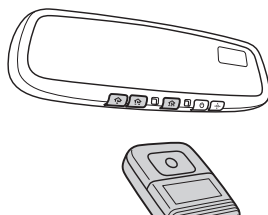 

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to "Garage door opener," Section 3-8 in the *Owner's Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

\* HomeLink® is a registered trademark of Johnson Controls, Inc.

**Audio**


**Type 1**

Push to turn ON/OFF

Seek station/  
CD track select

Push to adjust  
tone, balance  
& ASL\*

 Preset buttons - functions in other  
modes indicated above number

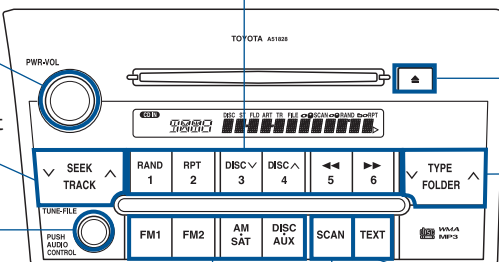

Eject CD


Push to skip  
up/down  
MP3 folder

Mode

Station/CD  
track scan


View CD  
information

**Type 2 additional functions**

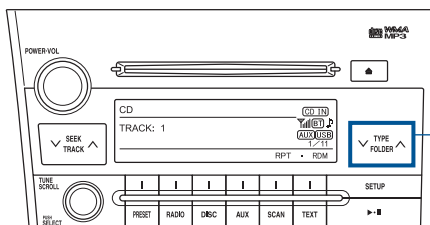 

View MP3  
folder and/or  
satellite radio  
category type

**Type 3 (with JBL speakers)**

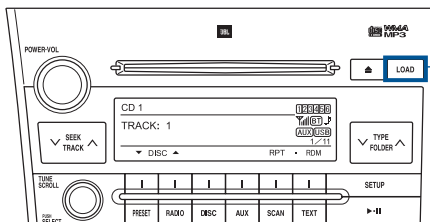 

Load CD(s)

\* Automatic Sound Leveling

**CD PLAYER**

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

**CD changer (Type 3 only)**

-To load one disc Push "LOAD" and insert one disc.



-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE" or "TUNE SCROLL."

To select a folder (MP3/WMA only) Push either side of "TYPE FOLDER."

 


## RADIO

**To preset stations** Tune in the desired station and hold down a preset button (1-6 or one of ) until you hear a beep. Push desired preset button (1-6 or one of ) to select.

**To scan stations** Push and hold "SCAN" to scan preset stations. Push again to hold selection.

## Steering wheel switches (if equipped)

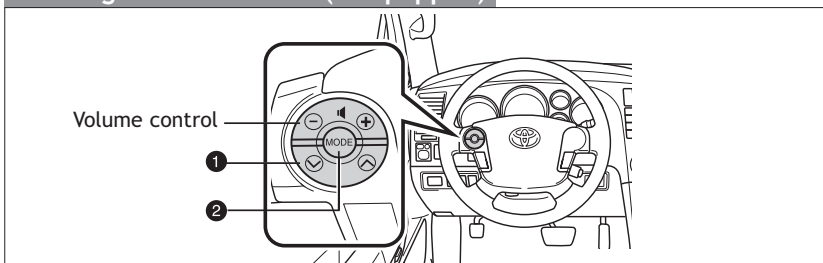


### 1 " V A "

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

### 2 "MODE"

Push to turn audio ON and select an audio mode. Push and hold to turn audio system OFF.
 
## AUX port/USB port

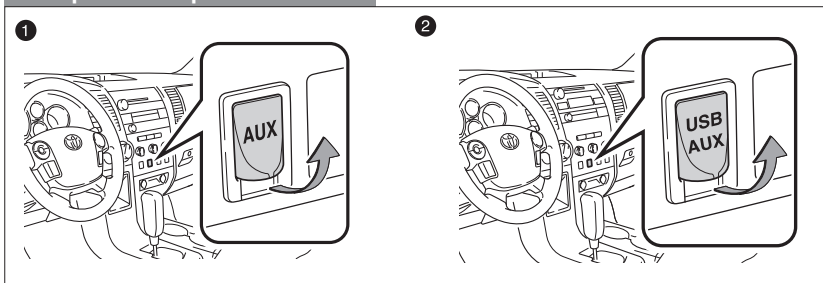


### 1 AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

### 2 USB port (if equipped)


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system while in USB mode.
 
## Rear seat entertainment system (if equipped)

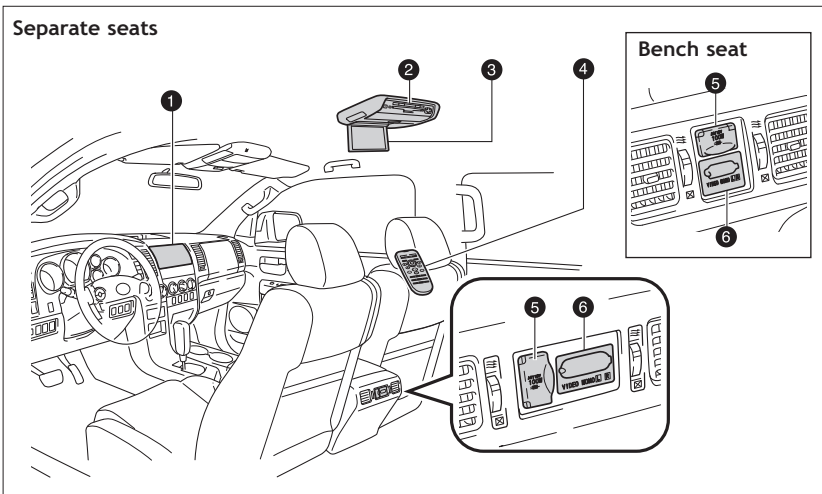

- ① Front audio system
- ② DVD player
- ③ DVD screen
- ④ Remote control
- ⑤ Power outlet
- ⑥ A/V input port


## VSC OFF button

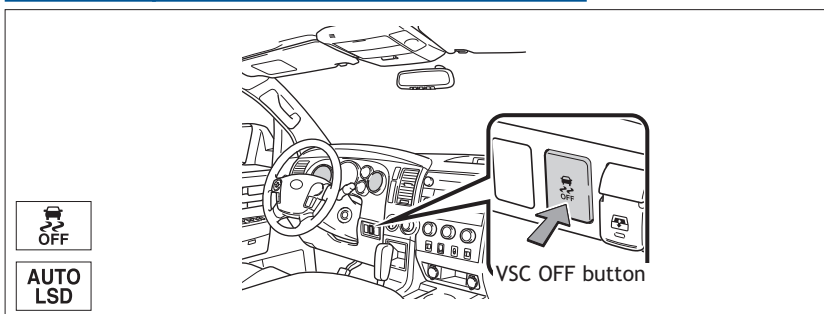 

The VSC OFF button is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

## Accessory meter

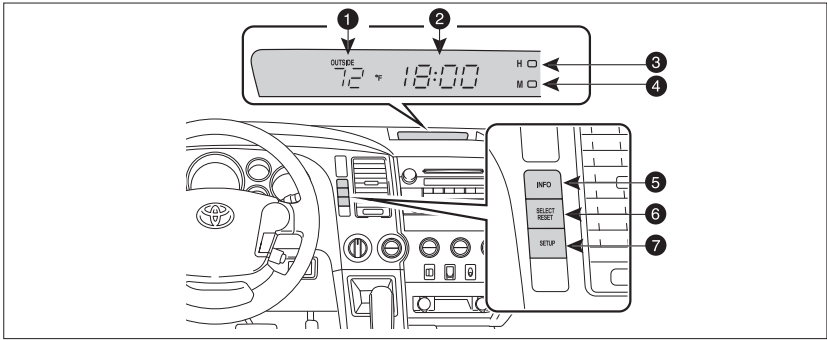 


- 1 Outside temperature/Cruise information display (if equipped)
- 2 Clock
- 3 Hour set
- 4 Minute set
- 5 Change information (if equipped)
- 6 "SELECT RESET" button (if equipped)
- 7 "SETUP" button (if equipped) to customize unit

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

## Cruise control (if equipped)
 
### Turning system ON/OFF

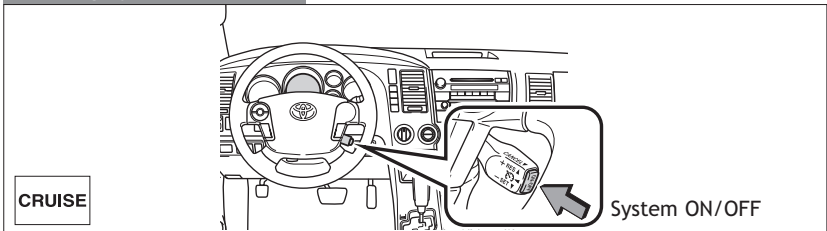


### Functions




<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.  
<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

## Telephone controls (Bluetooth®) (if equipped)

 
Audio unit

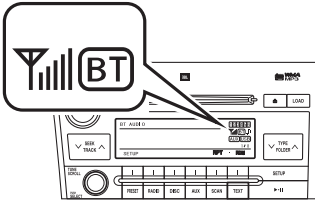


Steering wheel telephone switches

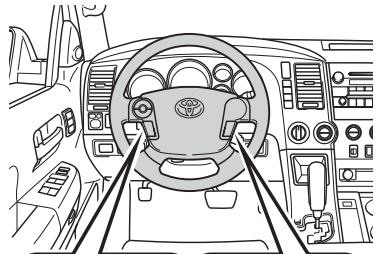 


Microphone

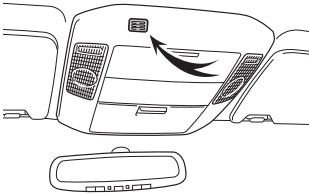 

Volume

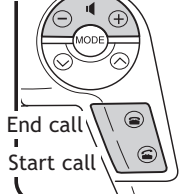 

Voice command button

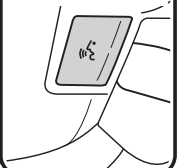 


Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the telephone and the system.


Refer to "Using the hands-free telephone system," Section 3-5 in the *Owner's Manual* for more details, or go to [Toyota.com](http://Toyota.com) and enter "Bluetooth" in the keyword search.

## Bottle holders

 
Instrument panel

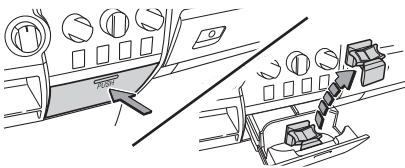

Front door

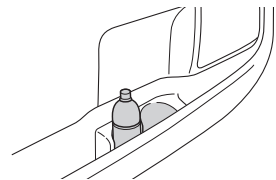 

Rear door

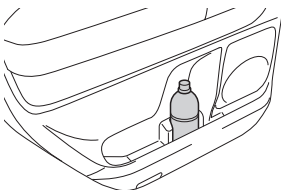 


Rear door (CrewMax model)




## Cup holders
 
### Separate seat

#### Center console


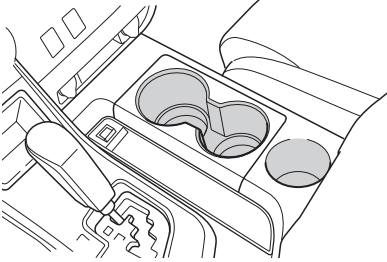


#### Back of the center console box (double cab model)

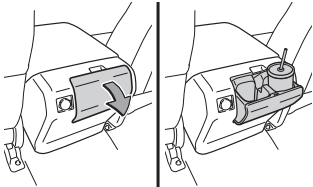 


### Bench seat
  
#### Front center seat

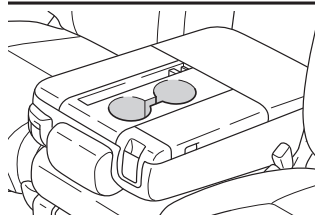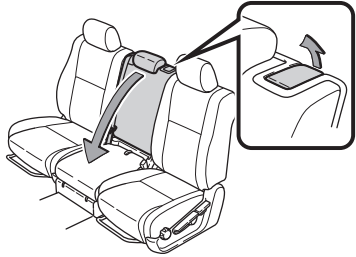


#### Back of the front center seatback (double cab model)

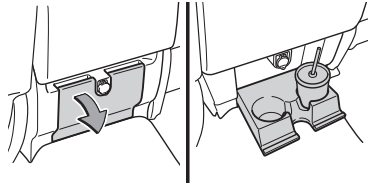 


### Rear seat
 
#### CrewMax model

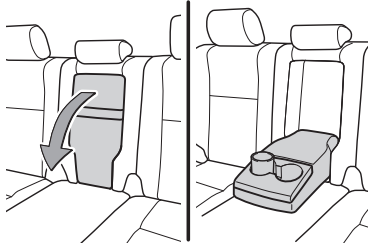

# SAFETY AND EMERGENCY FEATURES

 
## Seat belts

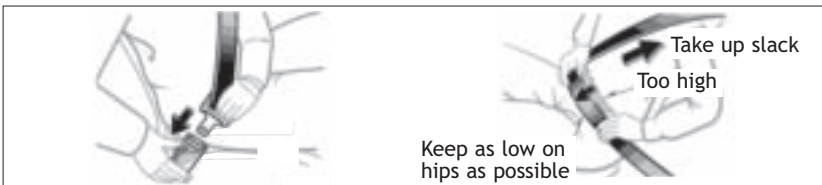


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor (CrewMax and double cab models)

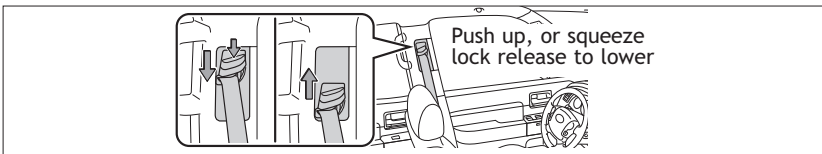 

## Tire Pressure Monitoring (warning) System

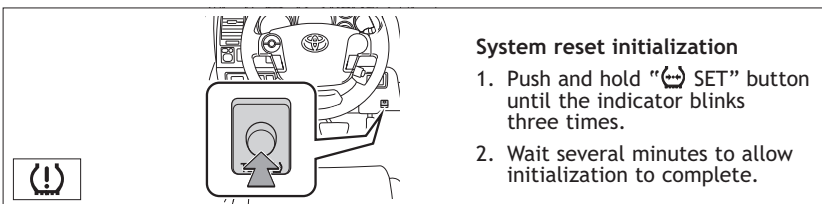 

**System reset initialization**

1. Push and hold "SET" button until the indicator blinks three times.
2. Wait several minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

 
Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

**NOTE:** The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

## Doors-Child safety locks (CrewMax and double cab models)

Rear door

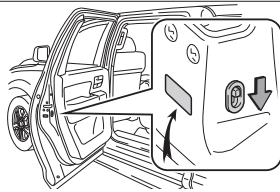


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Spare tire & tools
 
### Tool location


**Regular cab models**  
-behind the right seatback

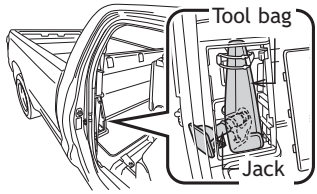

 
**CrewMax models**  
-behind the right rear seatback

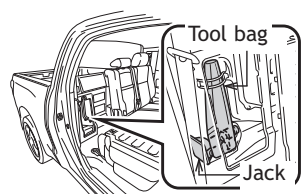

 
**Double cab models**  
-under the right rear seats  
without storage box

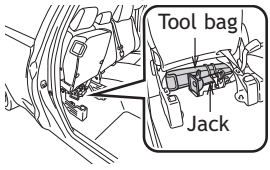

 **Double cab models**  
-under the right rear seats  
with storage box

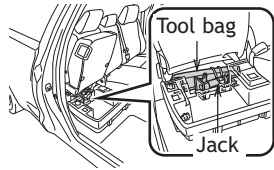

### Removing the spare tire

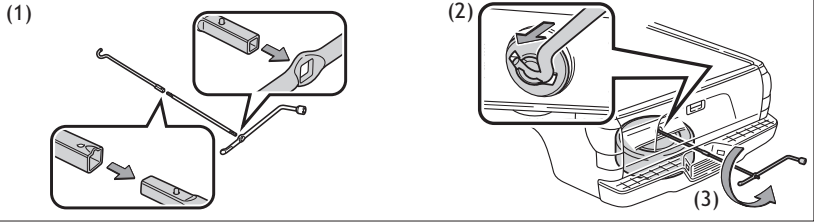 

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

